



USB COM(Virtual serial port)



All uppercase

Настройки

1.Заводские настройки



Настройки с меткой *

Note: scan the "Recall default" settings code, all settings of barcode scanner will be restored to factory default settings.

With "*" marked below is default settings.

2.Интефейс



USB Keyboard

3.Конец строки



* Add "Enter"



Remove "Enter"



Add newline



*Remove newline

4.Регистр



* Default case setting



All lowercase

5.Сигналы



* Вкл



Выкл

6.Настройки вывода (в USB HID)

The default is English, other languages can be set.



*Default



For Microsoft Excel&Notepad

The keyboard mode support output other languages by scanning the corresponding configuration code. (The default is English, other languages can be input)



For Microsoft Word

V2.1.20.1103



Версия прошивки

7.Язык



*USA



Spain



Italy



Singapore



Salvadora



Japan



Thailand



Belgium



Sierra Leone



Russia
"windows1251"



Hungary



Algeria&Arabic



Turkey



Russian
"Shift-jis"



Germany



Spanish Latin



British



FULL ASCII

8. Чтение URL

2D handheld barcode
scanner default enable.



Читать url QR code



Не читать url QR code

2D desktop barcode
scanner default disable.

②Data is not uploaded

Check whether the USB cable is successfully connected to the computer. If it is connected correctly, there will be a prompt sound. The driver installation will appear when connecting to the computer for the first time. After the driver is automatically installed, scan the code to test whether there is a decoding prompt sound.

If the decoding is normal, please scan the USB Keyboard in this Setup manual.

If there is no response after scanning the code, please scan " Recall default" and then plug it in again.

If there is no response after re-powering, or no response after scanning the setting code, please contact the dealer's for technical support.

10. Тестовый штрих-код

Please use the scanner after the device has finished booting to prevent the device from being unable to recognize the scanner or causing the device to start abnormally.

(You can try re-plug the device to solve this problem)

The following is the test barcode, which is used for transmission test.



12345678

2D barcode test